



Installation Guide

Steam heater - AMV(E) 55/56/655/658/659

065Z7020




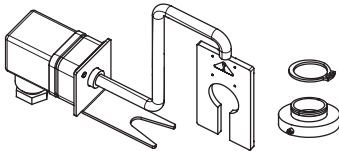


065Z7022

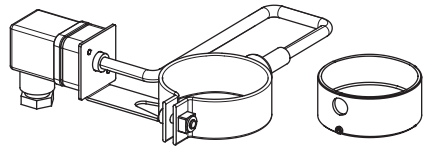


065Z7020 - AMV(E) 55/56 - VF / VL DN100

	=	
		4 mm
		3 x 0,6mm

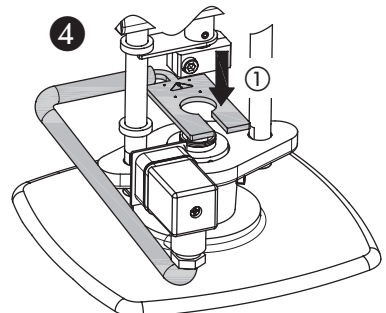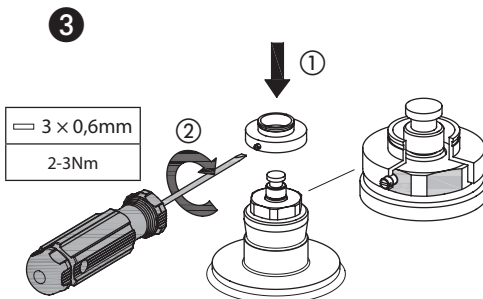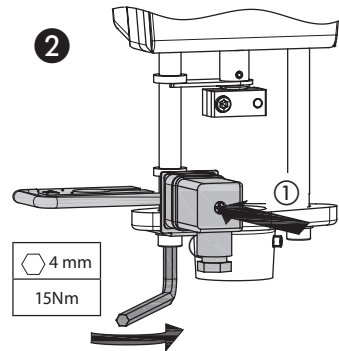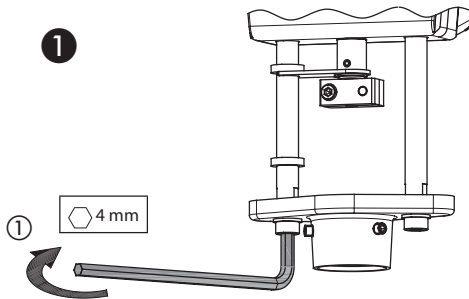








AMV(E) 55/56/655/658/659

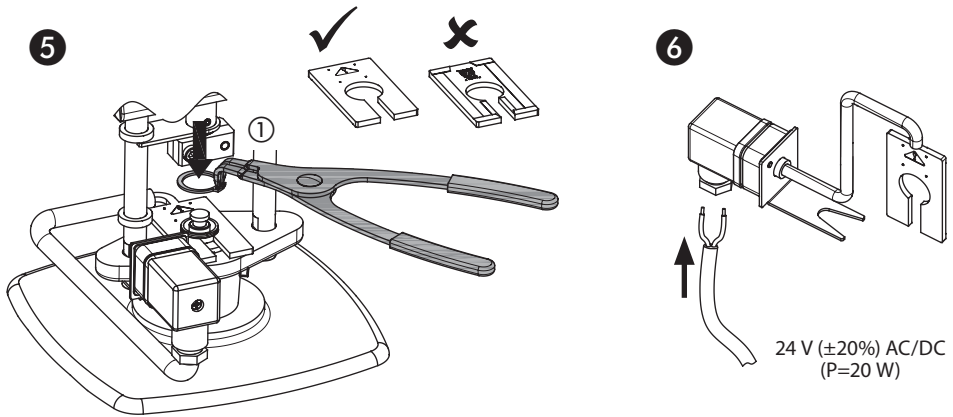

065Z7022 - AMV(E) 655,658,659 & VF / VL DN 100, VFM2 DN 65-125

→ =	
	2 mm
	4 mm
	5 mm
	17 mm

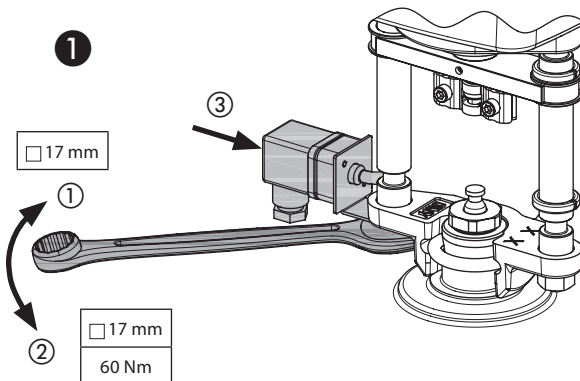


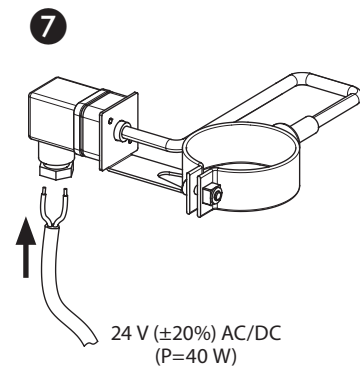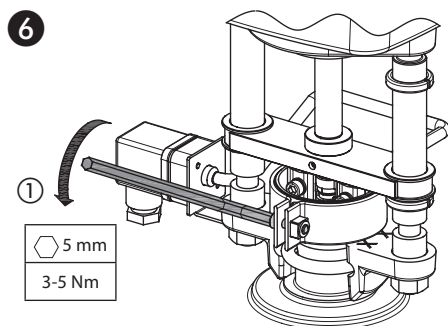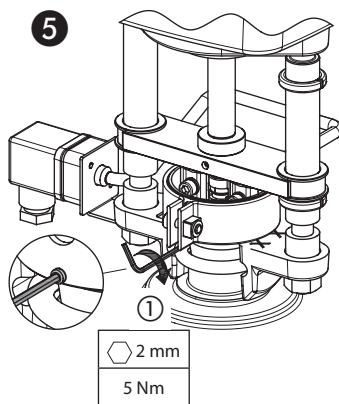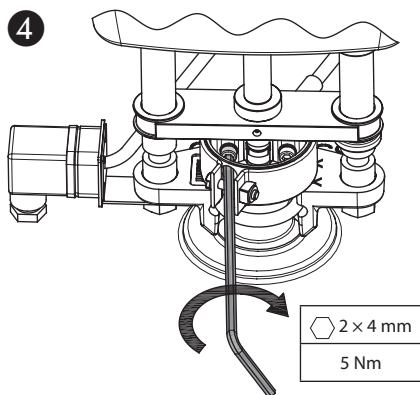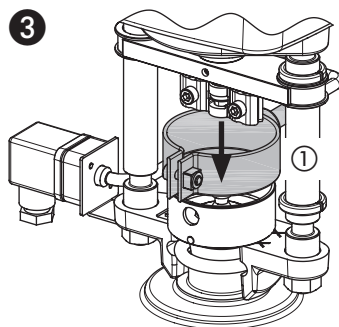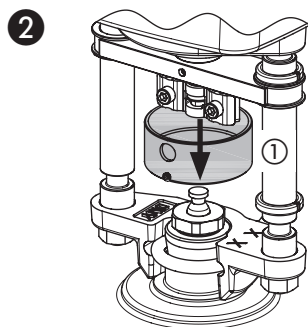

AMV(E) 55/56/655/658/659

065Z7022 - AMV(E) 655,658,659 - VFM2 DN 150-250

	=	
		5 mm
		17 mm

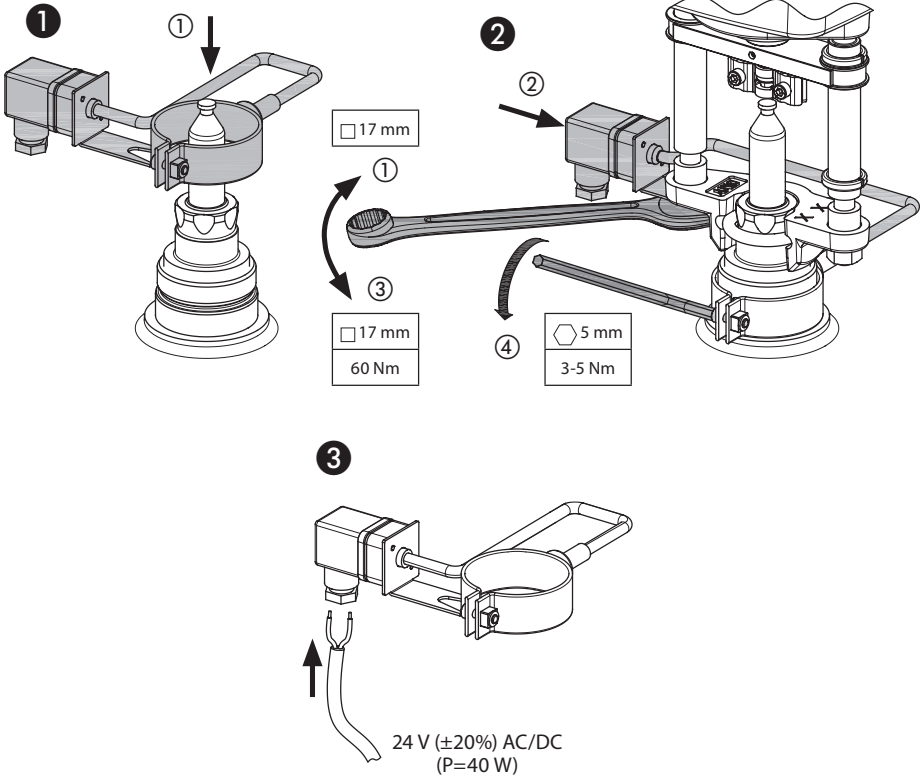

Danfoss A/S
Heating Segment • danfoss.com • +45 7488 2222 • E-Mail: heating@danfoss.com

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without consequential changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and all Danfoss logotypes are trademarks of Danfoss A/S. All rights reserved.