


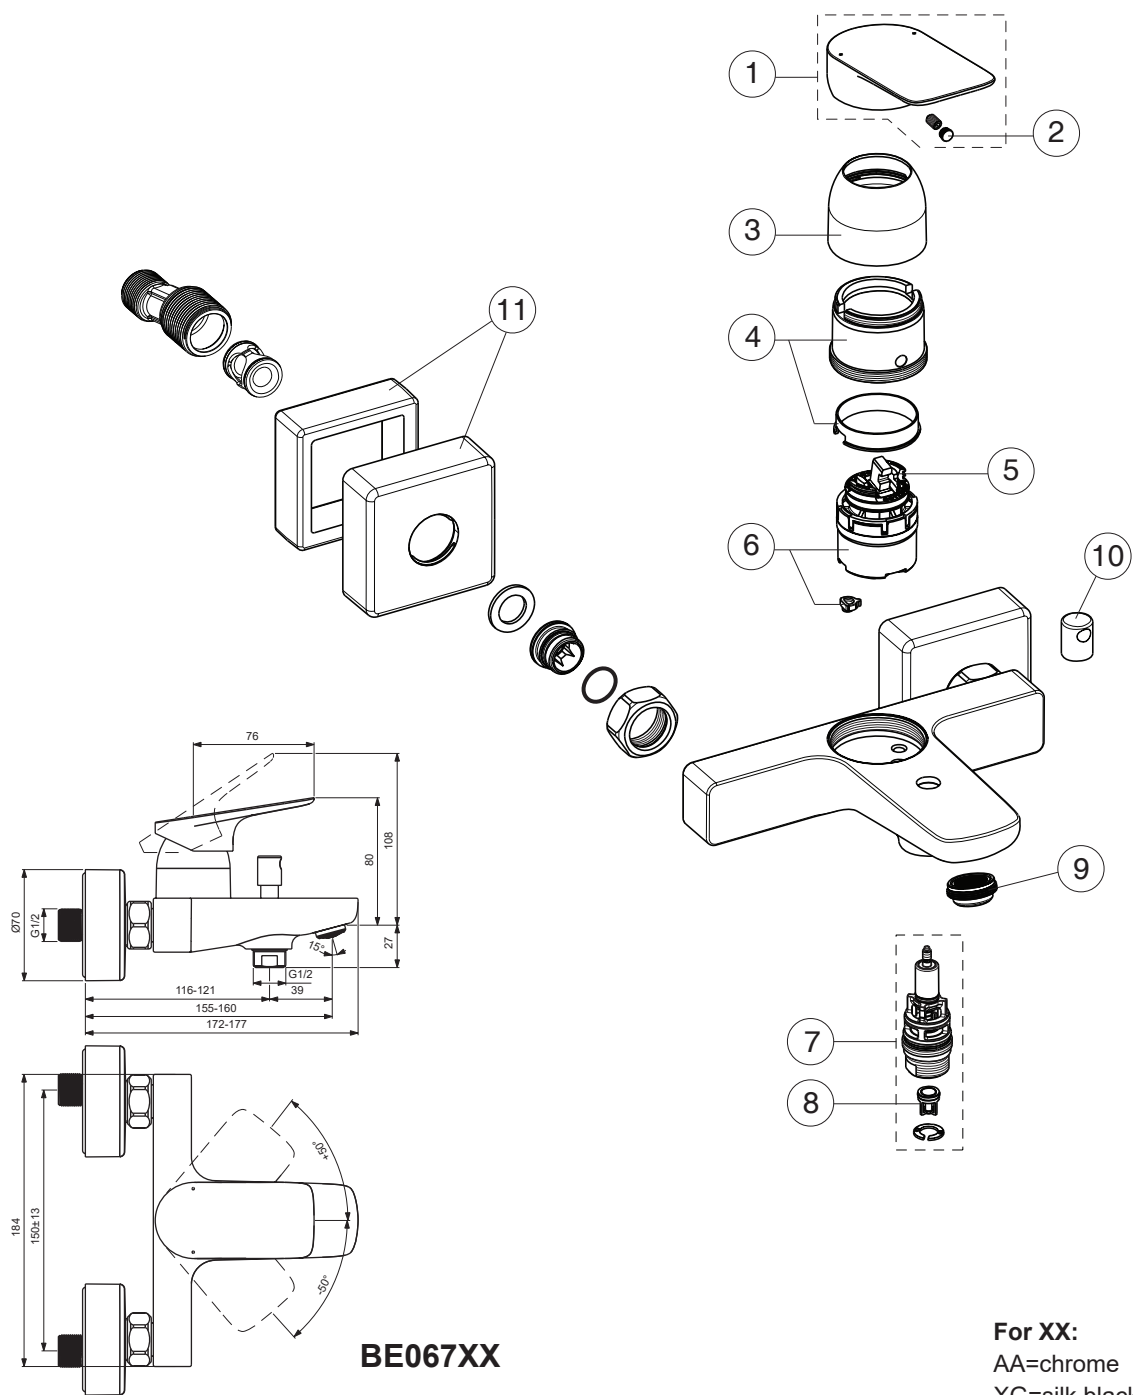

Pos.	Signify	Spare parts-Nr.	Quantity	Pos.	Signify	Spare parts-Nr.	Quantity
1	Lever	B961990XX	1 Set				
2	Rubber cap	B961951NU	3 Pcs.				
3	Rosette M41x1.5	B961386XX	1 Pcs.				
4	Screw M41x1.5/M46x1.5	B961387NU	1 Set				
5	Hot limit stop	A861181NU	1 Pcs.				
6	Cartridge Ø38mm	B961491NU*	1 Set				
7	Diverter automatic	B960167XX	1 Set				
8	Non return valve	A960944NU	2 Pcs.				
9	Aer.coin slot M24x1	A861436NU	1 Pcs.				
10	Pull knob	B960486XX	1 Pcs.				
11	Wall escutcheon	B961991XX	1 Set				

*Universal set (not all parts needed)